



- ON/OFF P 100
- LW, MW, SW, FM P101 - P108
- , RADIO, TAPE P201 - P204
- HIGH, NORMAL, MIC OFF P301 - P304
- MODE: STEREO, STEREO, MONO P601 - P604
- BEAD: OSC I, OSC II, OSC III P701 - P712
- PLAY / REC P701 - P712

www.serwis-tv.com

Radiomagnetofon Edyta 2
RMS 823